


METAL POST KIT PATENTED POST POCKET SYSTEM

PATENT # US 8,984,783B2

NO TOOLS REQUIRED!

Contents: (4) 4' Metal Posts (1) PVC Guide (2) Starter Arrows

Note: 3 Piece set for Tall Boys comes with only 3 metal post

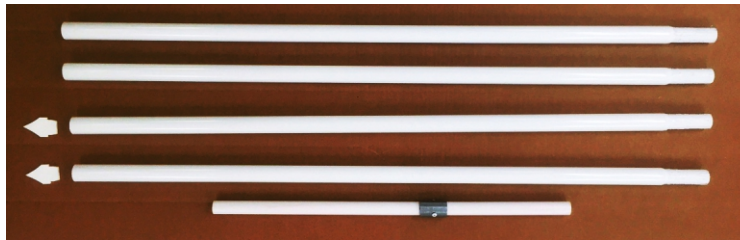

Step 1 - Lay the sign down on the ground so you can get the proper spacing/positioning for the posts

Step 2 - Hold 1 metal post with the wide end up and the small end on the ground where you want the first post installed. Then insert the short 10" end of the PVC guide into the top of the post. Next take another metal post and slide the wide end over the PVC guide, this will act as the post pounder. Continue to slide the post up and down over PVC guide until the first post is in the ground approximately 18". Repeat step 2 to install the second post. (Note: only 1 post needs to be installed in the ground for Tall Boy signs.)

Step 3 - Insert the starter arrows into the wide end of the 2 remaining posts*. Using the arrows, slide the posts into the Post Pockets of the sign until they are completely inserted. Note: approx. 8" of post will still be visible.
(*Tall boy signs only use a starter arrow in 1 post, the 2nd post slide into the bottom of the 1st)



Step 4 - Simply grab the sign with the posts inserted and slide over the posts that are in the ground.

www.1800TheSign.com